

Alarm Integration Module

Alarm Display Software for Senstar Sensors



FEATURES AND BENEFITS

- Single-map alarm display system
- Support for all Senstar security products (FlexZone®, FiberPatrol®, OmniTrax®, UltraWave™, UltraLink™ I/O, and XField®)
- Supports up to 5 Network Manager instances
- Reports sensor alarm, supervision, and diagnostic messages
- Acknowledgment, clear, and mask functions with selectable alarm disable terminology
- Password-protectable (event automatic mode, sensor mask, and configuration access)
- Runs on Windows® PC hardware (can be installed on same PC as Network Manager software)
- Fast, simple installation and configuration
- Configurable alarm sounds
- Integrate third-party sensors, devices and access controls by triggering UltraLink I/O relay outputs based on sensor status (secure, alarm, supervision, unacknowledged, disabled, etc.)
- Automatic operation mode

The Alarm Integration Module is an easy-to-use alarm display software application that shows the status of Senstar sensors. An optional map can be used to graphically represent zone and other sensor alarms.

The Alarm Integration Module is ideal for sites with simple security environments that require a single-map display and limited operator interactions. The software can also be used as a fall-back display within a more complex environment.

Operator features

With the Alarm Integration Module, operators can:

- Receive visual and audible alarm notifications
- Acknowledge and reset alarms
- Enable/disable alarm reporting on a zone-by-zone basis
- Receive equipment failure and tamper notifications
- View and print system event logs



Alarm Integration Module

Fast, simple setup

Installing and configuring the Alarm Integration Module is very easy. The software is bundled with the Network Manager (license key required for non-demo operation). Installers can provide a site map (.bmp or .jpg), configure alarm sounds, and set the software to automatically start.

If operator actions are not required, the system can be set to automatic mode, where events are recorded but automatically cleared after a configured period of time.

Part	Description
00FG0220	Network Manager software (service version) for Windows 7/8/10. Supports Silver Network™, Crossfire™, CCC, Sennet™, and FiberPatrol® networks and includes management tools and Alarm Integration Module software.
00SW0230	USB security key for Alarm Integration Module software – enables non-demo mode operation.

info@senstar.com • senstar.com

