

Whip Antenna Kit

T1KT1100


Description

The Whip Antenna Kit is used to connect an external, omni-directional whip antenna to a Flare sensor unit. The kit includes the following items:

- Whip antenna (x2):
 - Radiation pattern: 360 degrees
 - Frequency: 450–470 MHz
 - Connector: TNC
 - Length: Less than 17,8 cm (7 in)
- RG58 coaxial cable (x2):
 - 1.5 m (5 ft) length
 - Pre-terminated with TNC connectors
- Extender cable assembly (x2):
 - 220 mm (8 1/2 in) RG174 cable
 - Bulkhead TNC connector and SMA connector
- Installation instructions



Whip antenna

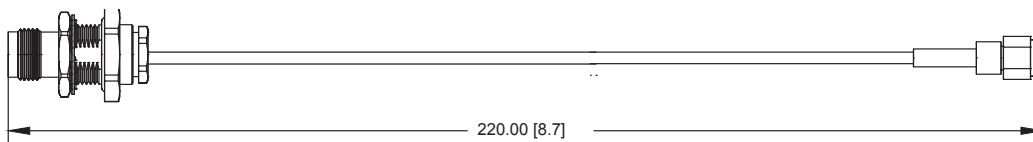

Extender cable assembly

See the Flare Datasheet for a full system description.